

Intelco Collar User Guide

Switching the collar on:

1. Turn on the receiver
2. Tune the receiver to the same channel as the collar
3. Remove the magnet and rubber strap. The transmitter will be switched on (may be a 3 second delay).

Switching the collar off:

While the receiver is beeping, place magnet on the end cap of transmitter. Stretch rubber piece around transmitter to hold the magnet in place. *Make sure the magnet is squarely on screw head to ensure the transmitter is switched off.

Note! Store the magnet separately to prevent the collar from being switched on by accident.

Options:

Tree switch or point mode

Beeps twice as fast as normal

Pulse code

Three rapid beeps every 20 Beeps

Low battery voltage warning

Eight rapid beeps with a very short delay between beeps

Bark indicator

Repeating double beep

Replacing batteries:

Note! New lithium batteries may require warm up period of a few minutes

1. Unscrew the battery compartment lid.
2. Replace both batteries with new **3.6 V lithium batteries**. Check the polarity of the batteries.
3. Screw the battery compartment lid closed.