

## Strike Collar: Users Guide

### Switching the collar on:

Turn the receiver on. Remove the magnet from between the transmitter and the collar strap. The red light on the end of the transmitter should be blinking. If the light does not blink check batteries.

**\*Note:** Store the magnet separately from the collar to prevent the collar from being switched off. Do not store around credit cards, magnetic tapes, or



### Switching the collar off:

Replace the magnet in the hole under the collar strap. The blinking red light should stop.

### Replacing the battery:

1. Use screw a driver to unscrew end cap on transmitter.
2. Replace the battery with a 3.6V AA Lithium Battery. (\*Or for longer range but less battery life use two of the 3.6V ½ AA Lithium Batteries) Make sure the positive end (the end with the nub) of the battery goes in first.
3. Screw end cap back into place and



### Options:

#### Tree Switch:

When activated will beep twice as fast as normal.

#### Point Mode

When activated will double beep indicating dog is on point.

**\*Tracking Tip:** The Receiver should be used at a 45-degree angle for maximum signal.